

Fluke i400s AC Current Clamp



Key features

- Companion to your scope or power quality meter to measure up to 400 A AC
- Only current clamp available with a CAT IV 600 V / CAT III 1000 V safety rating
- Specially designed to offer maximum utility in a compact shape
- Take accurate current readings without breaking the circuit
- Soft non-slippery overmold handle
- Optional PM9081/001 BNC/Banana adapter for DMM's
- Two ranges: 40 A and 400 A, 10 and 1 mV/Amp output
- Max. conductor \varnothing 32 mm

Product overview: Fluke i400s AC Current Clamp


Fluke current clamps extend the current ranges of digital multimeters, power quality analyzers, and portable oscilloscopes and are available for both AC and AC/DC environments. The Fluke i400s is specially designed to offer maximum utility in a compact shape and is the only current clamp available with a CAT IV 600 V / CAT III 1000 V safety rating.

Specifications: Fluke i400s AC Current Clamp

Specifications		
Nominal current range	40 A Range	0.5 A to 40 A
	400 A Range	5 A to 400 A

Basic accuracy	40 A Range	2% + 0.015 A (45-400 Hz)
	400 A Range	2% + 0.04 A (45-400 Hz)
Phase shift	40 A Range	
	0.5 to 1 A	Unspecified
	1 A to 5 A	4°
	5 A to 10 A	3°
	10 A to 20 A	3°
	20 A to 40 A	2°
	40 A to 400 A	NA
	400 A Range	
	0.5 to 1 A	NA
	1 A to 5 A	NA
	5 A to 10 A	Unspecified
	10 A to 20 A	2°
	20 A to 40 A	2°
	40 A to 400 A	1.5°
Typical bandwidth	40 A Range	5 Hz - 10 kHz
	400 A Range	5 Hz - 10 kHz
Output level(s)	40 A Range	10 mV/A
	400 A Range	1 mV/A
Crest factor	40 A Range	≤ 3
	400 A Range	≤ 3 to 300 A
		≤ 2.5 to 400 A
Safety Specifications		
Safety	CAT IV, 600 V, CAT III, 1000 V	
Maximum non-destructive current	1000 V AC	
Mechanical and General Specifications		
Warranty	1 year	
Maximum conductor size	32 mm (1.25 inches)	
Output cable length	2.5 m (8.2 ft)	
BNC adapter	Yes	
Dimensions	150 x 70 x 30 mm	
Weight	114 g	

Ordering information

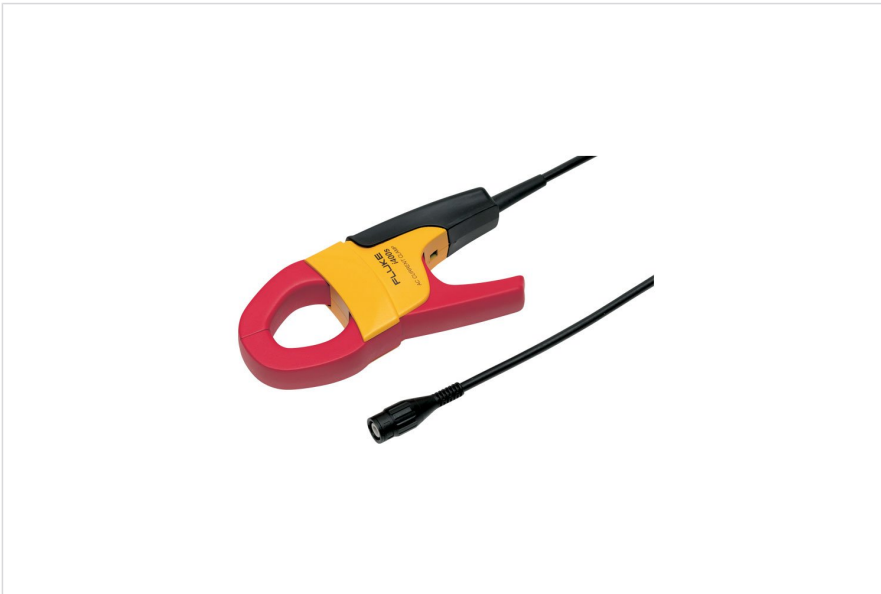

Fluke i400s

Fluke. *Keeping your world up and running.®*

Fluke Corporation

PO Box 9090, Everett, WA 98206 U.S.A.

For more information call:

In the U.S.A. (800) 443-5853

In Europe/M-East/Africa

+31 (0)40 267 5100

In Canada (905) 890-7600

From other countries +1 (425) 446-5500

Representative office of Fluke South East Asia Pte Ltd

C/O Danaher Vietnam

Green Power Tower, 11th Floor Unit 2

35 Ton Duch Thang Street, District 1

Ho Chi Minh City

Vietnam

Tel: +84-8-2220-5371 (ext 103)

Email: info.asean@fluke.com

www.fluke.com/vn-vi

©2021 Fluke Corporation. Specifications subject to change without notice.

12/2021

Modification of this document is not permitted without written permission from Fluke Corporation.